Basic Manual

W31S
by Sony Ericsson

CDMA 1X
WIN
au by KDDI

Contents
Before use
Phone
Phone book
Mail
Camera
EZweb
EZ "Chaku-Uta-Full™"
EZchannel
EZnaviwalk
EZ・FM
Text input
Troubleshooting
Other features Index

Welcome

Thank you for buying the W31S. Before using your W31S, read the W31S Basic Manual (PDF manual) to ensure correct use of your W31S. After you have finished reading this manual, store this PDF manual and the printed manuals in a safe place so you can retrieve them whenever you need them.

If you lose any of these manuals, contact an au shop or an au Customer Service Center.

Printed manuals for W31S (Japanese)

The W31S comes with the Basic Manual and the Manual.

W31S Basic Manual

Equivalent to this PDF manual.

W31S Manual

English version is not available.

The following manuals are also available from the au homepage:

- The downloadable Basic Manual and Manual
  (http://au-pro.kddi.com/phone/torisetu/index.html)
- The au online manual (Japanese) for searching by keyword
  (http://www.au.kddi.com/manual/index.html)

  The au online manual (Japanese) is also available from the EZweb:

  <To access>

  EZ Top menu →料金・申込・インフォ→ au オンラインマニュアル

The typeface and shape of fonts used in displays may differ from those used in actual displays or may be omitted.

Cellphone etiquette

■ Cellphones emit weak radio waves at all times even if you just turn the power on.
■ Enjoy and safely use your cellphone without forgetting those around you.

Some places forbid the use of cellphones.

- Do not use cellphones while you are driving. Doing so is dangerous and forbidden by law.
- Radio waves may interfere with airplane operation. Be sure to turn your cellphone off before you board airplanes.

Radio waves from cellphones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using pacemakers.
  Turn your cellphone off in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.

Consider where to use your cellphone and be careful of how loudly you talk.

- Do not make calls from cinemas, theaters, museums, libraries and other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being inconvenienced by the incoming ring.

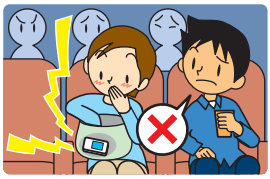

- Use your cellphone in places where you do not prevent others from passing through.
- Move to areas where you do not cause others inconvenience on trains or in hotel lobbies.
- Take care not to talk too loudly during conversations.

- Get other people's permission before you start taking photos with the cellphone's camera.

What W31S offers

Mail

You can send mail to other cellphones or PCs.

Page 41

Camera

You can easily take photos or movies and send them by e-mail.

Page 56

EZweb

You can download Chaku-Uta™, Chaku-Uta-Full™ or wallpaper etc.

Page 68

EZchannel

The information that you are interested in will be distributed automatically just by registering the program.

Page 78

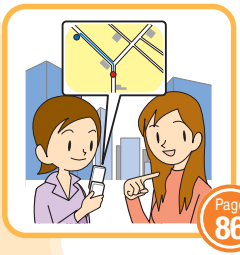

EZnaviwalk

You can confirm where you are now and be guided a route with a map or voice.

Page 86

Manner mode, record message and keylock

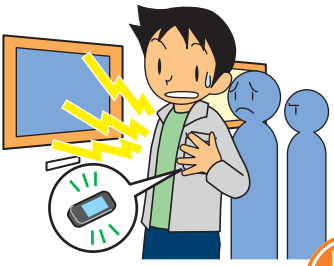

Manner mode

You can use the manner mode to turn incoming rings and other tones off to prevent others from being inconvenienced.
Hold down マナー for at least one second in the idle display.

Page 32

Record message

You can play answer messages and record messages from other parties when you cannot answer a phone call.
Hold down メモ for at least one second in the idle display.

Page 33

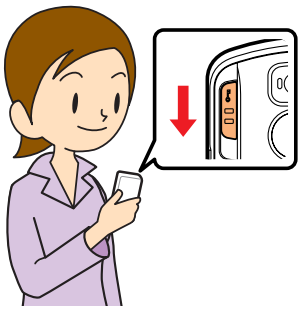

Keylock

When carrying the cellphone in a bag or a relevant thing, you can lock the keypad to prevent it from being pressed mistakenly.
Slide down the lock key on the rear side in the idle display. Then the keypad will be locked, and the will appear.
To release the keylock, again, slide down the lock key on the rear side in the idle display while the idle display is on.

Check the power, radio waves, and battery!

Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on.
Hold down for at least one second.

Page 13

You cannot talk if you are not receiving "radio waves."

It is sometimes difficult to receive radio waves in some places even in service areas.
indicates the reception state.

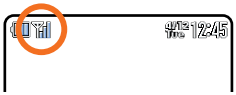

Page 13

Pay attention to the remaining "battery" power.

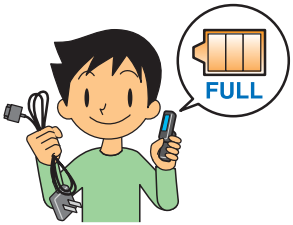

Sometimes the cellphone does not function properly if the remaining battery power is low.
indicates the remaining battery power.

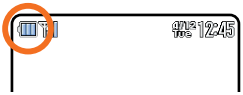

Page 13

Do not use the cellphone while driving

It is banned to hold a cellphone in a hand and use it for a call or to gaze at a screen to see mail, etc. while driving.
(November 1, 2004 Implementation of the Revised Road Traffic Law enforcement)

✕ Gazing at the screen to see mail

✕ Holding the cellphone to talk

Use drive mode or turn the power off while driving

Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded on the record message.
Press マナー in the idle display, press ⊙ to select "Drive," and press ● (select)

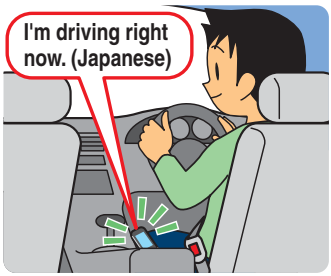

Disaster Bulletin Board Service

About Disaster Bulletin Board

When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be referred from anywhere in Japan through EZweb or Internet.

Registering safety information

- When a big scale disaster occurs, from au phone, you can register your safety information such as your condition or comments to the "災害用伝言板 " created on the EZweb.
- After the registration of your safety information, you can notify by e-mail your family or acquaintances you have previously designated that you registered your safety information on the "災害用伝言板 ."

Refering the safety information

- You can refer to the safety information of the person you want to know the information of by entering the phone number of the person from EZweb or internet. ※
- ※ When you refer to the safety information from other carriers' cellphone (except for TU-KA), PHS or PC, you can refer to it from http://dengon.ezweb.ne.jp/.

Access method	(EZ) → use and to select "Top menu" → "災害用伝言板 "
	http://dengon.ezweb.ne.jp/

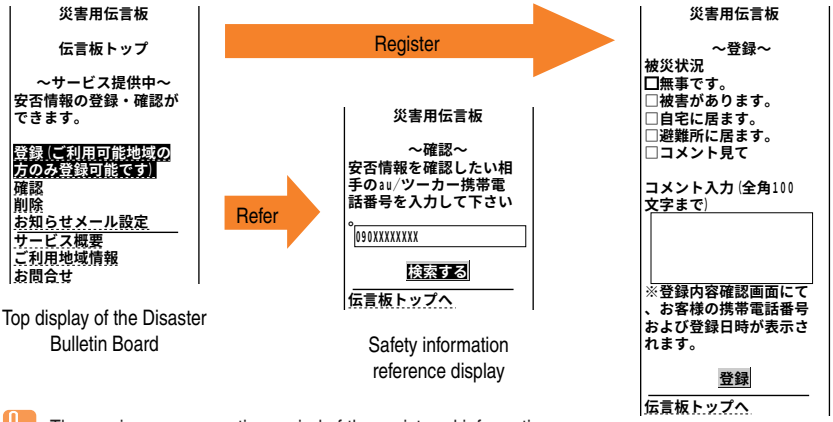

Top display of the Disaster Bulletin Board

Safety information reference display

Safety information registration display

- The maximum preservation period of the registered information is 72 hours.
- The maximum available number of each registration is 10. When the number of registration exceeds 10, from the oldest information will be overwritten.
- The demonstration of this service can be referred to anytime by pressing (EZ) → use and to select "Top menu" → " 料金・申込・インフォ " → " 災害用伝言板（デモ版）"

Watch out for spam and one-ring calls!

If you get incoming spam…

You can use the mail filter function to disable reception of just mail you specify or block mail indicated as "未承諾広告※" that contains lots of spam.

The following mail functions are available for preventing arrival of spam:

- "未承諾広告フィルター": To block spam
- "アドレスフィルター": To filter various addresses
  - "指定拒否設定": To reject specified mail
  - "指定受信設定": To receive only specified mail

Page 50

If you have an incoming call from an unknown number…

Such calls may be an invitation to you to return a call to services with very high charges. (This is a "one-ring call.")

The red icon is displayed in the Received display when you receive a one-ring call.

Page 29

Contents

Etiquette 1

Cellphone etiquette ... 1

Basics of the cellphone 2

What W31S offers ... 2
Manner mode, record message and keylock ... 3
Check the power, radio waves, and battery! ... 4
Do not use the cellphone while driving ... 5
Use drive mode or turn the power off while driving ... 5
Disaster Bulletin Board Service ... 6
Watch out for spam and one-ring calls! ... 7

Contents 8

Before use 10

Checking the package ... 10
Assembling the desktop holder ... 10
Charging the battery pack ... 10
Main Options ... 12
Opening and closing W31S ... 13
Turning the power on ... 13
Names of parts ... 14
Using the Cross menu ... 20
Initial settings for e-mail and EZweb ... 22
Confirming your cellphone number/e-mail address ... 23
Changing your e-mail address ... 24

Phone 26

Making a call ... 26
Receiving a call ... 27
Redialing the number (Dialed/Received) ... 28
Filtering one-ring calls ... 29
Changing the volume during a call ... 29
Changing the volume and tone of the incoming ring ... 30
Setting the manner mode ... 32
Setting the record message ... 33
Playing back recorded messages ... 34

Phone book 35

Saving to the phone book ... 35
Making a call from the phone book ... 37
Editing a phone book ... 38
Saving from Dialed or Received display ... 40

Mail 41

Using e-mail ... 41
Creating and sending e-mail ... 42
Opening a received e-mail ... 45
Replying to a received e-mail ... 48
Viewing received photos or movies ... 49
Filtering spam ... 50
Using C-mail ... 51

Creating and sending C-mail 52
Opening a received C-mail 54

Camera **56**

What you can do with this camera 56
Successfull taking of photos and movies 57
Taking photos 58
Recording movies 60
Viewing photos you have taken 62
Viewing movies you have recorded 64
Attaching a photo or movie to e-mail 66
Photo mail 67

EZweb **68**

About EZweb 68
Displaying the EZ Top menu 69
Viewing information sites 70
Saving your favorite sites 71
Viewing a site saved to the Favorite site 72
Confirming your call costs 73
Downloading a Chaku-Uta™ 74

EZ "Chaku-Uta-Full™" **76**

Downloading a Chaku-Uta-Full™ 76
Playing back a Chaku-Uta-Full™ 77

EZchannel **78**

What you can do with EZchannel 78
Enjoying EZchannel 80
Registering a program 81
Playing a program 82
Saving a program 84

EZnaviwalk **86**

What you can do with EZnaviwalk 86
Registering your home in "My-Spot" 88
Checking how to go home 90

EZ · FM **91**

How to listen to the EZ · FM 91
Listening to the EZ · FM 93
Suspending and ending the EZ · FM 95

Text input **96**

Changing the input mode 96
Inputting text 97

Troubleshooting **101**

Other features **102**

Index **103**

Before using, make the following prepartion.

Checking the package

Main unit

Desktop holder

Battery pack
(inside the main unit)

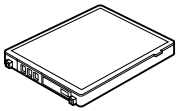

Sony Ericsson
USB cable 01

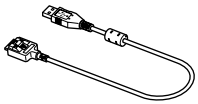

Assembling the desktop holder

When you use the desktop holder for the first time, be sure to follow the procedure below to assemble it.

Insert the desktop holder in the direction of the arrow until you hear a click.

Once the desktop holder is assembled, you cannot remove it. Removing the desktop holder by force will cause damage.

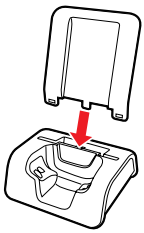

Charging the battery pack

When you purchase your W31S, the battery pack is not fully charged.
Before you use the W31S, charge the battery pack.

1 Connect the common AC adaptor 01 (option) to the desktop holder.

Carefully check the connector shape, and then connect it.

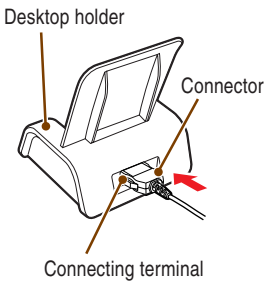

2 Fold out the power plug of the common AC adaptor 01 (option), and plug it into a 100 VAC power outlet.

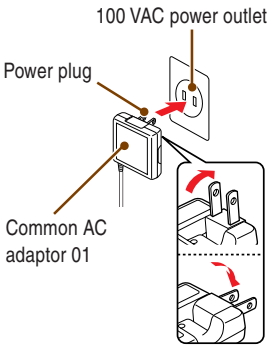

Basic Manual (Japanese)

Manual (Japanese)

- Remote controller with microphone※
- Stereo earphone (sample)※
  ※ Please connect to use.
- CD-ROM (2 CDs)
  「W31S CD-ROM by SonyEricsson」
  「SonicStage Ver3.0 for W31S CD-ROM」
- Warranty (Japanese)
- Safety Precautions (Japanese)

3 Insert W31S to the desktop holder with the battery pack attached to it and closed.

- The charge indicator lamp lights in red → Charging is in progress.
- The charge indicator lamp turns off → Charging is finished.

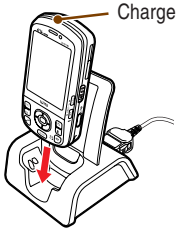

When the battery is fully charged, pull out W31S upward.

You can also charge the battery pack by directly connecting the common AC adaptor 01 (option) to the W31S

Carefully check the connector shape, and then connect it.

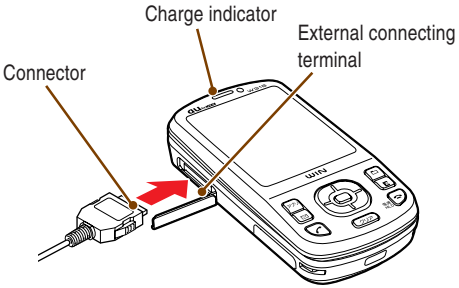

Main Options

The followings are not supplied together.

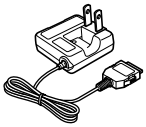

Common AC adaptor 01

"Memory Stick Duo" (commercial item)

Memory Stick Duo adaptor (commercial item)

How to use the "Memory Stick Duo" (commercial item)

To insert

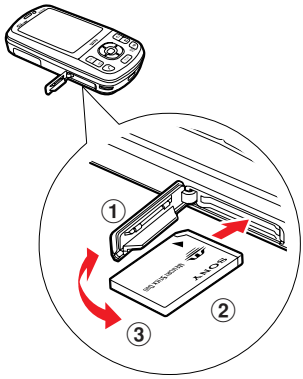

① Open the slot cover.
② Carefully check the direction of the "Memory Stick Duo," and then insert the "Memory Stick Duo" into the slot.
③ Close the slot cover.

To remove

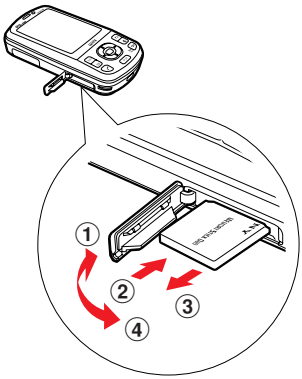

① Open the slot cover.
② Gently press down the "Memory Stick Duo." (Be careful since the "Memory Stick Duo" may pop up.)
③ Remove the "Memory Stick Duo."
④ Close the slot cover.

Opening and closing W31S

To open W31S

Slide down the open key on the side.

W31S opens automatically.

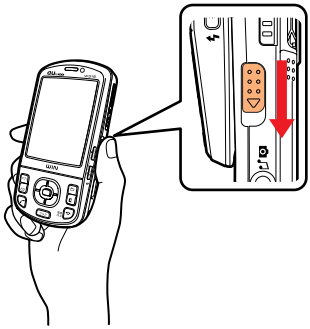

To close W31S

Slide down the front part of the main unit to the bottom until you hear a click.

Push down until the front part is locked.

Opening the W31S by force without using the open key or opening and closing it by force will cause damage.

Turning the power on

1 **Hold down for at least one second.**

(idle display)

Check the remaining battery power.

Fully charged	Medium	Low	Fully discharged

- Charge the battery pack when the power is low.

Check the reception state.

Strong	Medium	Weak	Very weak	Out of service area

- You cannot receive or make calls if "圏外" (Out of service area) is displayed.
- Sometimes you cannot receive or make calls if " " (Very weak) is displayed.

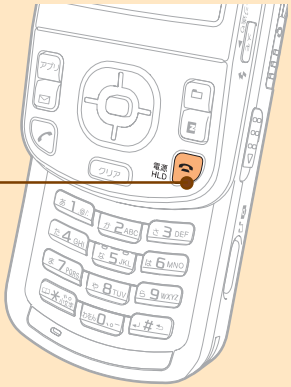

To turn the power off

Hold down for at least two seconds.

Names of parts

Front part (when open)

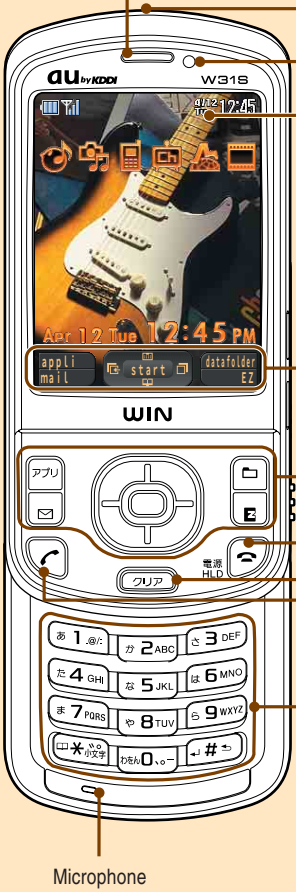

Earpiece

Microphone

Incoming indicator/Charge indicator

Blinking: when receiving a call/mail
Lights red: charging
Off: Charging finished or idle

Bright sensor

Display
(page 15)

Soft key/Cross Controller
(pages 18 and 19)

End/Power key

Ends a call and operations
Hold down (1 second): Turns power on
Hold down (2 seconds): Turns power off

Clear (cancel) key

Cancels operations
Deletes characters when entering characters

Send (making a call)/ Receive (receiving a call) key

Phone number/Character key

わ 0 ~ ら 9, ＊, ＃: Dial key
Inputs phone numbers/characters/symbols

If you are unsure of an operation or you have made a mistake, return to the previous display by pressing クリア, or return to the idle display by pressing .

Display

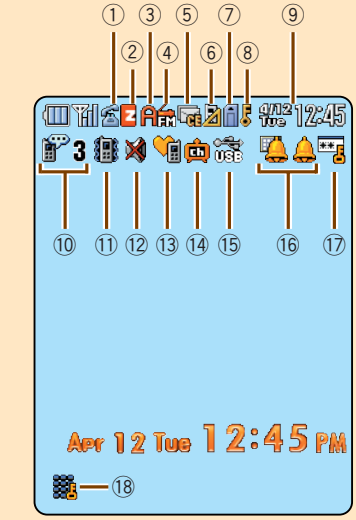

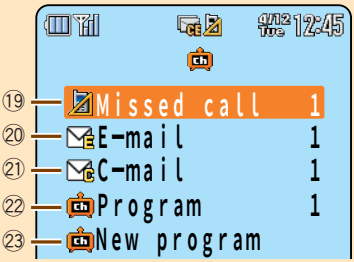

	Icon	Description
①		During a call
②		While you are using EZweb
③		While you are using EZ apps
④		While you are using EZ · FM
⑤		When mail has been received or when mail has not yet been read
⑥		When there is a missed call
⑦		When the "Memory Stick Duo" (commercial item) is inserted
⑧		While the secret mode is set
⑨	—	Date and time
⑩	3	While record message is set The number of recorded messages
⑪		When the vibrator is set to "ON"
⑫		When the ring volume is set to "OFF"
⑬		While the manner mode is set
⑭		When an EZchannel program is registered
⑮		While USB cable is connected
⑯		While the alarm is set
⑰		While the auto lock is set
⑱		While keylock is set
⑲		The number of missed calls
⑳		The number of unread received e-mails
㉑		The number of unread received C-mails
㉒		The number of new EZchannel programs
㉓		When there are program information of EZchannel

Names of parts (continued)

Side part (when open)

Manner key

Calls manner display and displays previous page etc.

Hold down (1 second): Sets or cancels the manner mode

Memo key

Calls memo function and displays next page etc.

Hold down (1 second): Sets or cancels the record message

Stereo earphone terminal

Connects stereo earphone

Open key

Opens W31S by sliding down

Shutter key

Starts music player

In Camera function: Shutter

Hold down (1 second): Calls photo monitor display

External connecting terminal

Connects common AC adaptor 01(option) or the supplied options such as Sony Ericsson USB cable 01 to this part.

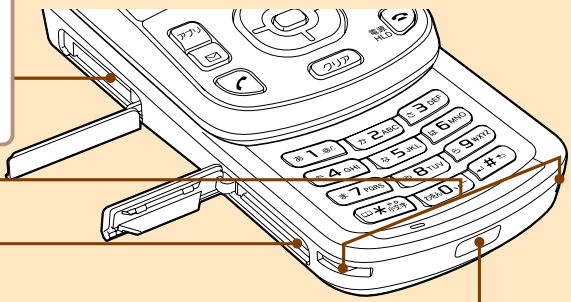

Charge terminal

"Memory Stick Duo" slot (page 12)

The eyelet for hand strap

Back side (when open)

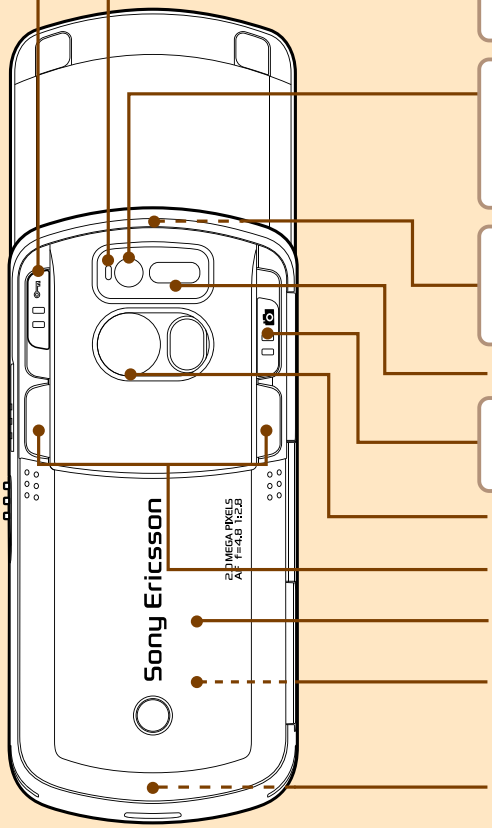

Lock key

Sets or cancels key lock

Camera start indicator

When starting camera: Lights in red

Flash LED/Photo light

In Camera function: Lights flash LED/photo light

Idle display: Lights assist light

Built-in antenna (main)

- Be sure not to cover the built-in antenna during a call or using EZweb.

Infrared port

Lens cover key

Opens the lens cover by sliding it down

Lens (for photo/movie)

Speaker

Rear cover

Battery pack (built-in)

Built-in antenna (sub)

Names of parts (continued)

Soft keys

Each part works according to the displayed indication as shown in the illustration below. The displayed indications vary depending on the function or information, and the function of each key will accordingly vary.

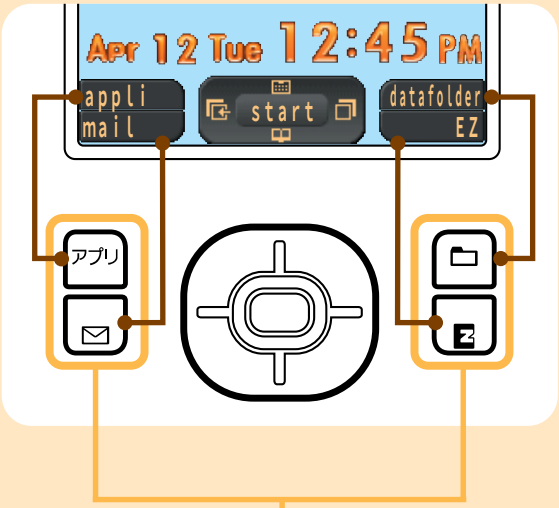

Operations in the idle display

アプリ Opens EZ apps menu	 Calls the data folder
 Opens E-mail menu Hold down (1 second): Opens C-mail menu	 Opens EZ menu

How to use cross controller™

Press up, down, left or right to move a cursor and press center (center key) in desired place to determine the items as shown in the table below.

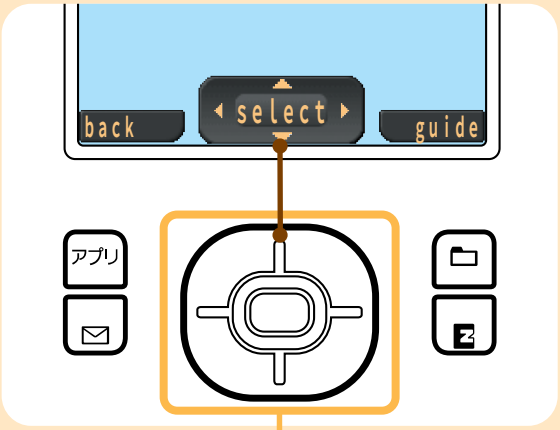

Display	Description in this manual	Operation	Explanation
			**Press up and down** Moves a cursor up and down **Operations in the idle display** : Calls schedule : Calls phone book (page 35)
			**Press light and left** Moves a cursor light and left **Operations in the idle display** : Calls Received display (page 28) : Calls Dialed display (page 28)
			Press Center (center key) Determines items or calls Cross menu

Using the Cross menu

The W31S allows you to call various menus from the Cross menu that displayed by pressing ● (start) in the idle display. Use ✣ and ● for operation.

In the idle display

Press ● (start) to display the Cross menu.

Select from the Cross menu

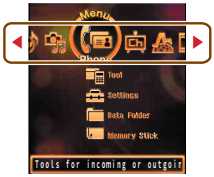

Horizontal



Press ✣ to select a menu.

Chaku-Uta-Full

- Music Player
- Chaku-Uta-Full Folder
- Jump to EZ Music!
- Sound Folder
- Player Settings

Entertainment

- MySelection
- M.S. Music Player
- EZ · FM
- Photo
- Movie
- Remote Controller

Menu

- Phone
- Tool
- Settings
- Data Folder
- Memory Stick

Vertical

Press ● to select an item in the menu.

Use ● to determine the item

Press ● (select) to determine the item.

EZchannel

- Message
- Registrated Program
- Program Guide
- Update Check
- Multi Folder
- Book Folder
- Settings

EZnaviwalk

- Going-out Menu
- My-Spot
- Return Home
- View My Map
- E-mail My Map
- EZnavi Portal
- Settings

EZmovie

- EZmovie Portal
- Live Camera Portal
- EZmovie Folder

Initial settings for e-mail and EZweb

If you subscribe to the EZweb service,

To do the following initial settings.
If you have not subscribed to EZweb, see the notification at the bottom of this page.

1 Press (mail) in the idle display.

Pressing (EZ) or (appli) also allows you to do initial settings.

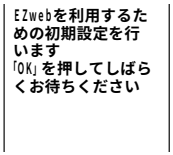

2 Press (ok).

Your e-mail address will be assigned automatically from au, and the initial setting will be completed.
You can change to an e-mail address you like (page 24).

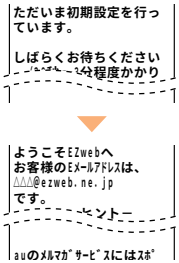

3 Press (ok).

The E-mail menu appears.

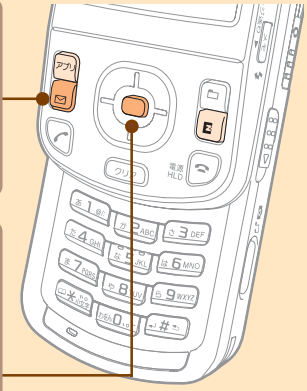

Your e-mail address is automatically determined when you make the initial settings. You can change to an e-mail address you like (page 24).

If you has not subscribed to EZweb service yet,

Contact an au shop or an au Customer Service Center. You need to subscribe to the EZweb service to use e-mail, EZweb, EZ "Chaku-Uta-Full™," EZchannel, EZnaviwalk, EZ apps (BREW®), EZmovie, EZ · FM, and Remote controller application.

If you are not going to use either e-mail or EZweb.

Initial settings are not necessary. Skip to page 23.

Confirming your cellphone number/e-mail address

1 **Press (start) in the idle display.**

The Cross menu appears.

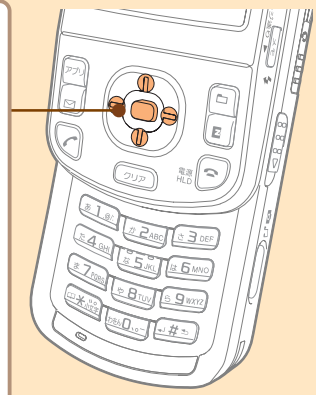

2 **Press to select (Phone), and press (select).**

The Phone menu appears.

3 **Press to select "Profile," and press (select).**

The profile display appears so that you can confirm your cellphone number and e-mail address.

You can also confirm your cellphone number and e-mail address by pressing (start) and in the idle display.

Default settings

The followings are set at the time of purchasing.

Chg Lock No. (Change Lock No.)	1234	Font size	EZweb font: Large font E-mail font : Largest font
Caller ID	ON		

Changing your e-mail address

e-mail address

Example : △△△@ezweb.ne.jp

Changeable part　Domain

1 Press (mail) in the idle display.

2 Press to select "Settings," and press (select).

3 Press to select "Other," and press (select). Press to select "Yes," and press (select).

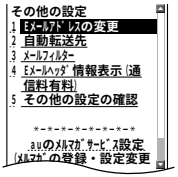

4 Press to select " E メールアドレスの変更 ," and press (Select).

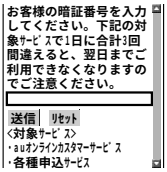

5 Press ⊜ to select the input field, and press ● (Edit). Input your security code, and press ● (ok).

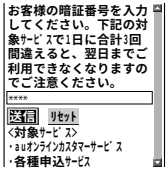

Security code is the 4-digit number that you wrote in the application form when subscribing.

Note that no setting operation is allowed until the following day if you enter the wrong security code three times in one day.

6 Press ⊜ to select " 送信 ," and press ● (Select). Press ⊜ to select " 承諾する ," and press ● (Select).

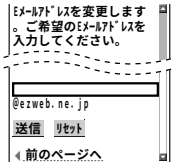

7 Press ⊜ to select the input field, and press ● (Edit). Input the section preceding @, and press ● (ok).

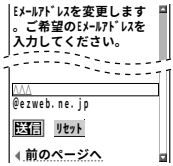

For details on how to input e-mail addresses, see page 97.

8 Press ⊜ to select " 送信 ," and press ● (Select).

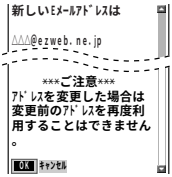

When an e-mail address cannot be changed

- The e-mail address that you inputted is already being used. Input a different e-mail address.
- Unsupported characters have been inputted. Use characters that are supported (See page 97).

9 Press ⊜ to select "OK," and press ● (Select).

For details on how to confirm e-mail address, see page 23.

Making a call

1 **Press 0 to 9 to input the other party's phone number.**

To call a regular phone, input the phone number starting with the area code.

To notify the other party of your cellphone number

Input "186" before your cellphone number.

Not to notify the other party of your cellphone number

Input "184" before your cellphone number.

2 **Press .**

When you have finished the call, press .

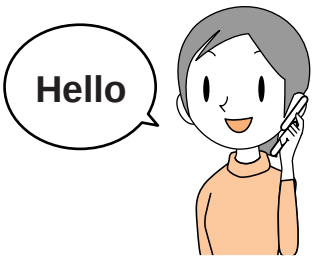

Receiving a call

1 **Press (call) or (call) to answer the call.**

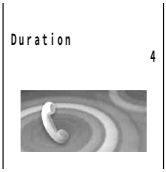

When you have finished the call, press .

Display when you have received a call

Phone number	When the other party has set to notify Caller ID. If the other party's name and phone number are already saved in the phone book, that person's name is also displayed.
"ID Unsent"	When the other party has set not to notify Caller ID.
"Payphone"	When you have received a call from a payphone.
"Not support"	When you have received a call from a party that is not able to notify you of his/her phone number.

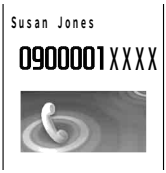

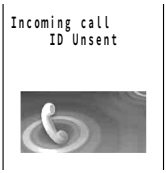

Display if you could not answer a call

If you could not answer a call, you are notified that you had a call on the display.
If you press (select), you can confirm the phone number of the other party that called you and redial that party.

Redialing the number (Dialed/Received)

1 Press ◀▶ in the idle display.

◀ ( ) : Displays Received display.
▶ ( ) : Displays Dialed display.

Icons of Received display

(blue) : The call that you were not able to answer (missed call).
(red) : The call within three seconds (one-ring call).

2 Press ● to select the phone number you want to call, and press .

The call is connected to the phone number you selected.

In each display, the phone numbers of the latest 30 calls will be saved.

Filtering one-ring calls

What is a one-ring call?

This is a call you receive from an unknown party. They ring only once and leave their phone number in your Received display to make you call back to that number and connect you to a service with very high charges.

One-ring call warning icon

When you have received a one-ring call (call time less than three seconds), the red icon is displayed in the Received display. Be careful when you call back to a number you do not recognize.

Changing the volume during a call

1 **Press ⊙ during a call.**

⊙ : The volume increases at five levels.
⊙ : The volume decreases at five levels.

Changing the volume and tone of the incoming ring

Example: When setting a "preset" incoming ring

1 Press ● (start) in the idle display.

2 Press ◉ to select (Settings), and press ● (select).

3 Press ◉ to select "Sound/ Vibrator," and press ● (select).

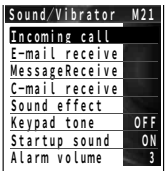

4 Press ◉ to select "Incoming call," and press ● (select).

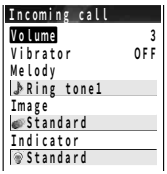

5 Press ◉ to select "Volume," and press ● (select).

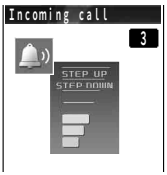

6 Press ● to adjust the volume, and press ● (ok).

"OFF": The incoming ring does not sound.
"1" to "5": The incoming ring sounds at the level you set.
"STEP DOWN": The volume of the incoming ring decreases.
"STEP UP": The volume of the incoming ring increases.

"STEP DOWN" and "STEP UP" can be selected by pressing ● up beyond "5."

7 Press ● to select "Melody," and press ● (select).

"Ring tone1" is set at the time of purchasing.

8 Press ● to select "Preset," and press ● (select).

If you press ● (play), the incoming ring you selected plays back.
If you press ● (■) while the incoming ring is being played, the incoming ring stops playing.

9 Press ● to select an incoming ring, and press E (save).

Setting the manner mode

The W31S vibrates to notify you of incoming calls.

1 Hold down マナー for at least one second in the idle display.

The manner mode is set, and , and appear in the display.
At the same time, record message is set, and appears in the display.

To cancel the manner mode

Hold down マナー for at least one second in the idle display.

Manner settings are "Manner," "Silent," "Drive" and "Original."

Setting the record message

1 Hold down メモ for at least one second in the idle display.

Record message is set, and appears in the display.

You can use the record message to record a message from the other party by pressing E (memo) during reception of an incoming call.

You can record a message from the other party within 20 seconds (up to three messages).

To cancel record message

Hold down メモ for at least one second in the idle display.

If the record message still contains any message, 1 remains in the display even after you cancel record message. 1 disappears when record message data is deleted.
You can delete recorded messages by pressing (delete) while the recorded message is playing back or by pressing アプリ (delete) after playing recorded message.

When you turn the power off or you are in a place where the radio waves are weak, use Voice Mail.

Playing back recorded messages

When a message is recorded

A message appears in the idle display, then 1 (number of recorded messages) also appears in the idle display.

1 Press メモ in the idle display.

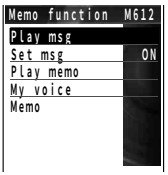

2 Press ● to select "Play msg," and press ● (select).

3 Press ● to select the recorded message to play back, and press ● (play).

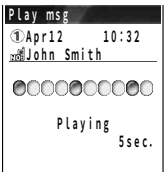

You can delete recorded messages by pressing (delete) while the recorded message is playing back or by pressing アプリ (delete) after playing recorded message.

Phone book

You can save up to 500 phone numbers or e-mail addresses.

Saving to the phone book

1 Press ● (📖) in the idle display.

2 Press E (new).

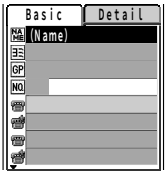

3 Press ● to select NAME (Name), and press ● (select).

4 Input the name, and press ● (ok).

(JP reading) is automatically inputted.

For details on how to input text, see page 96.

5 Press ● to select ☎ (Phone no.1), and press ● (select).

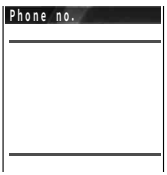

Saving to the phone book (continued)

6 Input the phone number, and press (ok).

"Mobile" is automatically inputted at (phone type).

If the phone number to save is a regular phone, start by inputting the area code.

To end saving the phone book, jump to step 9.

7 Press to select (Mail address1), and press (select).

8 Input the e-mail address, and press (ok).

"Mobile" is automatically inputted at (e-mail address type).

For details on how to input e-mail addresses, see page 97.

9 Press (cmplt).

The entry is automatically saved to the smallest available memory number from 000 to 499.

You can also save other items such as groups, incoming rings, postal addresses, and birthdays.

Making a call from the phone book

1 Press ○ (📖) in the idle display.

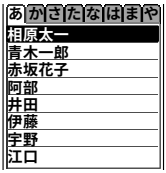

To switch from the " あ " to "ETC" display lines

Press ○.

2 Press ○ to select the other party to call, and press ○ (select).

3 Press ○ to select the phone number, and press ○.

Editing a phone book

Example: To edit phone numbers

1 Press (○) (📖) in the idle display.

To switch from the " あ " to "ETC" display lines

Press ◁▷.

2 Press ◎ to select the address to edit, and press ● (select).

3 Press E (edit).

4 Press ○ to select the item you want to edit (in this case, ☎) and press ● (select).

5 Edit the information, and press ● (ok).

Press クリア to delete a saved character.
To delete all characters, hold down クリア for at least one second.

6 Press E (cmplt).

Saving from Dialed or Received display

1 Press ◀▶ in the idle display.

◀ ( ) : Displays Received display.
▶ ( ) : Displays Dialed display.

2 Press ▲▼ to select the phone number to save in the phone book, and press E (save).

"New": Creates and saves a new address.
"Add" : Adds and saves newly added information.

3 Press ▲▼ to select "New," and press ● (select).

The edit phone book display appears. The phone number you selected is automatically inputted.

For details on how to save information in the phone book, see steps 3 to 9 on pages 35 and 36.

Using e-mail

About e-mail

E-mail is a service allows you to exchange mail with PCs or cellphones that support e-mail. Besides being able to send mail comprising up to 5,000 double byte characters, you can also send photos and movies.

Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or an au Customer Service Center if you did not subscribe to the service at the time of purchase.
- To do initial settings before using the e-mail and EZweb services.
  If you have not done initial settings yet, see page 22.
- You can send e-mail to up to five destinations at a time.
- You can send up to 1,000 e-mails (including recipients of broadcast messages) in one day.

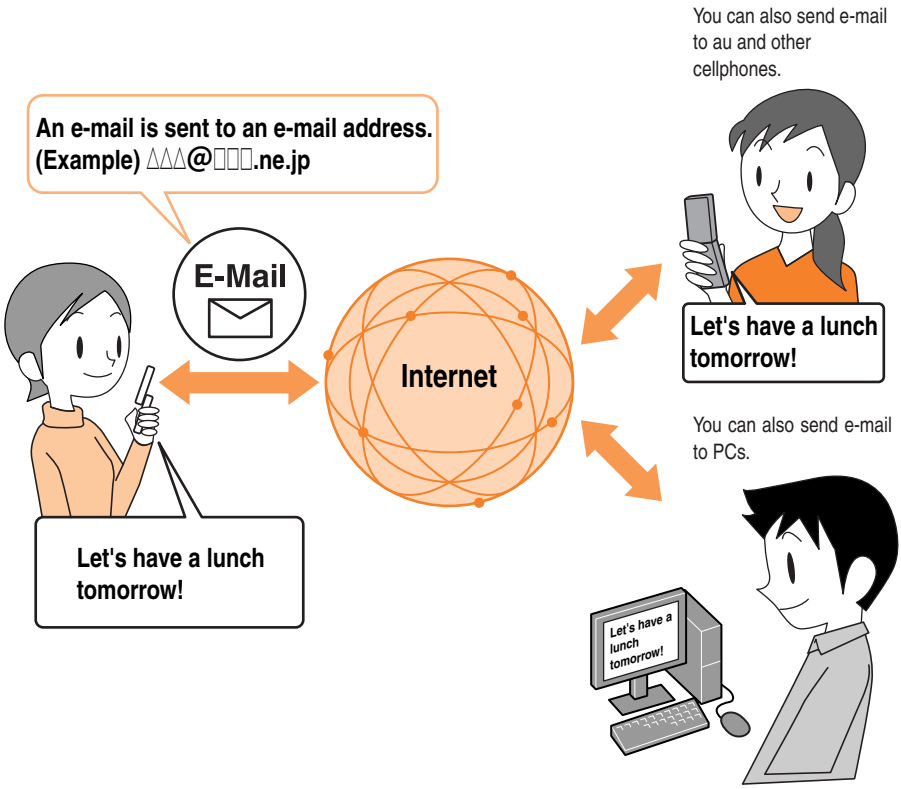
You can also send e-mail to au and other cellphones.
An e-mail is sent to an e-mail address.
(Example) △△△@□□□.ne.jp
E-Mail
Internet
Let's have a lunch tomorrow!
Let's have a lunch tomorrow!
You can also send e-mail to PCs.
Let's have a lunch tomorrow!

Creating and sending e-mail

1 Press (mail) in the idle display.

2 Press to select "Create new," and press (select).

Icons

- To (Address): Input the e-mail address of the party you want to send the e-mail to.
- Sub (Subject): Input the subject of the e-mail.
- (Attachment): Attach data to e-mail.
- (Main text): Input the main text of the e-mail.

3 Press to select To (address), and press (select).

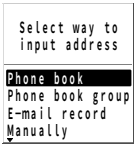

There are three types of destinations: To, Cc and Bcc.You can send e-mail to up to 640 single byte characters including To, Cc and Bcc).

4 Press ● to select "Phone book" and press ● (select).

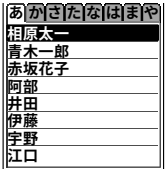

You can select an address from E-mail record or input an address manually.

5 Press ● to select a name you want to send an e-mail and press ● (select).

6 Press ● to select an e-mail address and press ● (select).

7 Press ● to select Sub (subject), and press ● (select).

8 Input the subject, and press ● (ok).

9 Press ◉ to select 📄 (main text), and press ● (select).

10 Input the main text, and press ● (ok).

11 Press [2] (send).

12 Press ◉ to select "Send," and press ● (select).

The e-mail is sent.

Opening a received e-mail

When you receive an e-mail

A message appears in the idle display, then ✉ also appears in the idle display.

1 Press ● (select).

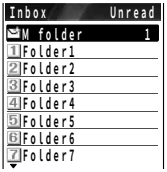

Icon

✉: Indicates the folder containing new mail.

2 Press ◉ to select the folder containing new mail, and press ● (select).

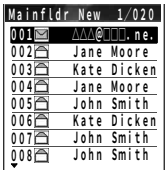

Icons

✉: Indicates "read mail" that has already been read.

✉: Indicates "unread mail" that has not yet been read.

3 Press ● to select the new mail, and press ● (viewer).

How to view received mail

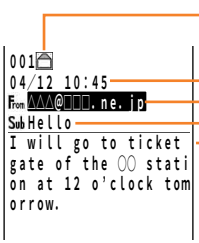
001
04/12 10:45
From △△△@□□□.ne.jp
Sub Hello
I will go to ticket gate of the ○○ station at 12 o'clock tomorrow.
Indicates read mail.
Indicates the date and time when the mail was received.
Indicates the mail's sender.
(A name is displayed if it is saved in the phone book.)
Indicates the mail's subject.
Displays the mail's main text.

Hold down 0 for at least one second changes the font size.

Pressing ◀ or クリア returns the display to the received mail list display.

To open an e-mail in the Inbox

1 Press (mail) in the idle display.

Icon

: Indicates "unread mail" that has not yet been read.
The number on the right is the number of unread mails.

2 Press to select "Inbox," and press (select).

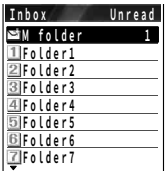

3 Press to select the folder containing the mail you want to read, and press (select).

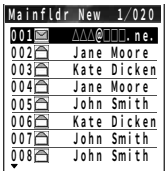

4 Press to select the mail you want to read, and press (viewer).

Replying to a received e-mail

1 See steps 1 to 4 in "To open an e-mail in the Inbox" (page 47) to view the content of a mail.

2 Press ● to select From (sender) or Sub (subject) and press ● (reply).

Sub (subject) is prefixed with "Re:," and the main text of the e-mail is quoted.

3 Press ● to select (main text), and press ● (select).

4 Input the main text, and press ● (ok).

5 Press ✉ (send).

6 Press ● to select "Send," and press ● (select).

The e-mail is sent.

Viewing received photos or movies

Example: To view a photo attached to a received e-mail

1 See steps 1 to 3 in "Opening a received e-mail" (pages 45 and 46) to view the content of a mail.

Icons

: Indicates that a photo is attached to the mail.

2 Press ● to select a file name, and press ● (recv).

The file is received. Press ● (view) to view the photo.

Press ● to select a photo, and press ● (view) to view the entire photo in the display.

Filtering spam

Setting the mail filter

The mail filter function allows you to block spam or set the W31S to receive only specified mail. You can also block mail indicated as " 未承諾広告※ " that contains lots of spam.

Follow the procedure below to use the mail filter function.

① Press (mail) in the idle display, and use and to select "Settings" → "Other"

② Use and to select "Yes" → "3 メールフィルター," and input your security code.

The mail filter function contains the following functions.

未承諾広告フィルター

This filter allows you to block mail containing " 未承諾広告※ " in its subject.

アドレスフィルター

全受信	All e-mails are received.
指定受信設定	E-mails whose e-mail addresses are specified are only received. " 一括指定先 " : This specifies Internet and cellphone domains. " 個別指定 " : This specifies the section preceding @, the domain or the entire e-mail address.
指定拒否設定	This specifies the section preceding @, the domain or the entire e-mail address, and blocks only those specified e-mails.
なりすまし規制	This filters e-mail from a spammer who pretends to be using a cellphone or a PHS when you set " 全受信 " and " 規制する " simultaneously.

Security code is the 4-digit number that you wrote in the application form when subscribing.

By changing your e-mail address, you can prevent spam from being received.
For details on how to change e-mail address, see page 24.

C-mail also provides a function to block spam.

Using C-mail

About C-mail

C-mail is a service that allows you to exchange mail among other au cellphones that support C-mail using cellphone numbers. You can send mail comprising up to 50 double byte characters by C-mail.

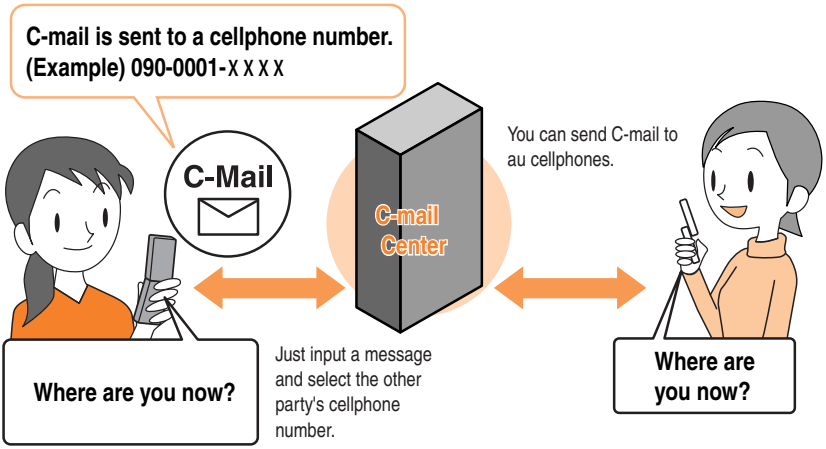
C-mail is sent to a cellphone number.
(Example) 090-0001-XXXX
C-Mail
C-mail Center
You can send C-mail to au cellphones.
Where are you now?
Just input a message and select the other party's cellphone number.
Where are you now?

C-mail safe block function

C-mail safe block function is a function that allows you to reject to receive C-mails that include accessing URL (http://△△△、 https//△△△) or phone numbers in the C-mail message text.
C-mail safe block function is valid by default. You can cancel the setting if you want to receive C-mails that include accessing URL or phone numbers in the C-mail message text.

Creating and sending C-mail

1 Hold down (mail) for at least one second in the idle display.

2 Press to select "Create new," and press (select).

3 Input the main text, and press (ok).

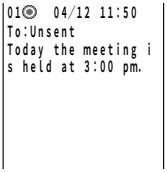

4 Press (send).

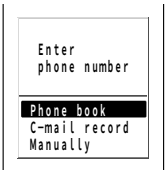

5 Press to select "Phone book," and press (select).

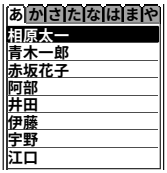

You can select an address from C-mail record or input an address manually.

6 Press ◉ to select a name you want to send a C-mail and press ⊖ (select).

7 Press ◉ to select a phone number and press ⊖ (select).

8 Press ⊖ (select).

The C-mail is sent.

Opening a received C-mail

When you receive a C-mail

A message appears in the idle display, then ✉ also appears in the idle display.

1 Press ● (select).

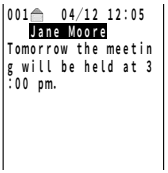

To open a C-mail in the Inbox

1 **Hold down (mail) for at least one second in the idle display.**

Icon

: Indicates "unread mail" that has not yet been read.
The number on the right is the number of unread mails.

2 **Press to select "Inbox," and press (select).**

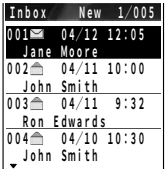

3 **Press to select the C-mail you want to read, and press (viewer).**

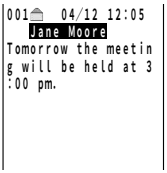

Camera

The W31S has the camera of 2.01 million valid pixels and allows you to take photos and record movies. You can send photos and movies you have taken attached to e-mail.

What you can do with this camera

You can have fun with photos and movies on the W31S.

You can set photos you have taken as the idle display, or save photos or movies to the phone book or display them when you have an incoming call.

You can mail photos and movies.

You can send photos and movies attached to e-mail.
※The VGA, SXGA, UXGA format is ideal for using photos on personal computers.

Page 66

You can print out photos or browse them using a PC.

You can save photos you took in the "Memory Stick Duo" (commercial item) and print them out with a printer or at a photo shop, or browse them using a PC.

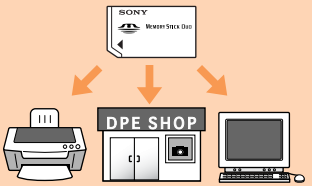

You can focus a camera automatically by using auto focus function.

Successfull taking of photos and movies

How to hold the W31S

To take "QVGA" or "QQVGA" photos

Hold the W31S firmly not to shake it.

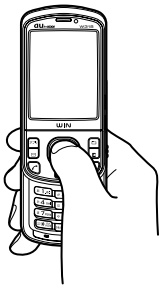

To take "VGA," "SXGA," "UXGA" photos or record movie

Hold the W31S with both hands.

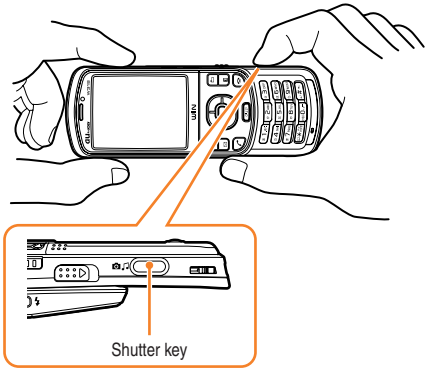

You can take photos/movies by using (shutter key) on the side of your cellphone.

How to set the W31S

① **Attach your elbows to your body lightly to prevent your armpits from opening.**
② **Hold the main unit not to shake it.**
If your armpits are open or your arms are stretched, the main unit may move and it may cause a blur.
③ **Be sure not to cover the lens by finger.**

Points to prevent a blur

① **Do not move the main unit.**
Do not move the main unit since you press the shutter until the shutter sound stops. Be careful especially when you shoot in the dark.
② **Use self-timer**
You can prevent a blur caused by pressing the shutter.

Taking photos

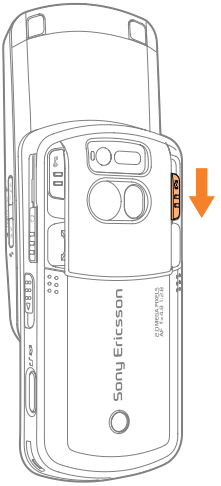

1 Slide down the lens cover key in the idle display.

The photo monitor screen appears.

2 Display the subject you want to take on the photo monitor screen.

3 Press ● (shoot).

You hear the shutter sound, and the photo you have taken is displayed (preview screen).

Press ● (shoot) to focus to the object automatically. When the focus is on, the sound beeps and [ ] changes from white to green, then the picture is taken automatically.

If you press and hold ▣♫ ▭ (Shutter key) halfway on the side of your cellphone, it will focus on the object automatically. When the sound beeps and the [ ] changes from white to green, press down the ▣♫ ▭ (Shutter key).

4 Press ● (save).

"Saved in data folder" is displayed, and the display returns to the monitor screen.

You can also save photos by pressing 📷♫ (shutter key) on the side.

Photos are saved in the "Photo folder" of the data folder. Each photo is titled as follows:

Example of a photo title

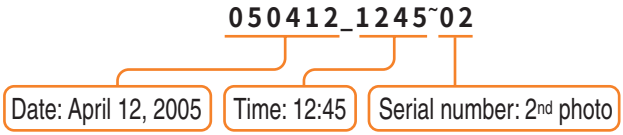

There are five photo shoot modes: "QVGA," "QQVGA," "VGA," "SXGA" and "UXGA".

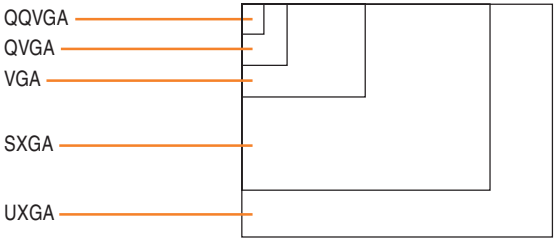

Photo titles are different from the above if "VGA," "SXGA" or "UXGA" photos are taken.

About the "Memory Stick Duo" (commercial item)

If you take photos with "VGA" "SXGA" or "UXGA" by inserting the "Memory Stick Duo" in the W31S, their images are saved in the "DigiCame folder" in the "Memory Stick Duo."

Recording movies

1 Slide down the lens cover key in the idle display to display the photo monitor screen and press [2] (movie).

The movie monitor screen appears.

2 Hold the W31S sideways with both hands. Display the subject you want to take on the movie monitor screen.

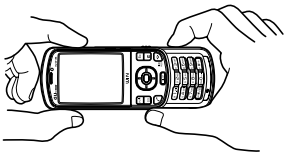

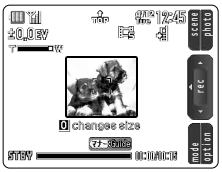

3 Press (shutter key) on the side of your cellphone.

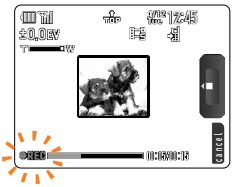

If you press and hold (Shutter key) halfway on the side of your cellphone, it will focus on the object automatically. When the sound beeps and the [ ] changes from white to green, press down the (Shutter key).

You hear the shutter sound, and REC flashes when recording starts.

You can also record movies by pressing (rec).

To cancel recording

Press [C] (cancel).

To stop recording

Press (shutter key) or (■).

When you stop recording or the recording time ends

The initial recorded screen is displayed vertically (preview screen).

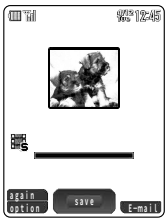

(preview screen)

4 Press ● (save).

"Saved in data folder" is displayed, and the display returns to the movie monitor screen.

You can also save movie by pressing 📷♫ (shutter key) on the side.

Movies are saved in the "Movie folder" of the data folder.
Each movie is titled as follows:

Example of a movie title

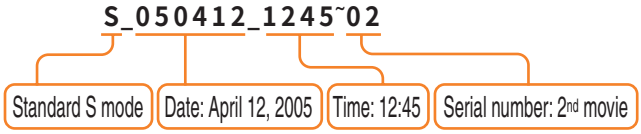

There are five movie record modes: "Standard S," "Standard M," "High quality M," "High quality L" and "Video QVGA".

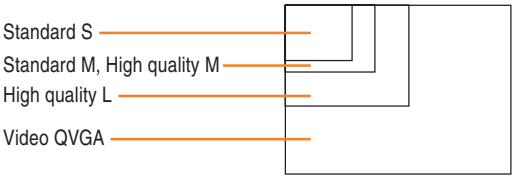

Movie titles are different from the above if other than "Standard S" movies are recorded.

About the "Memory Stick Duo" (commercial item)

If you record movies with "Video QVGA" by inserting the "Memory Stick Duo" in the W31S, their images are saved in the "Movie folder" in the "Memory Stick Duo."

Viewing photos you have taken

Example: To play back data from the Photo folder

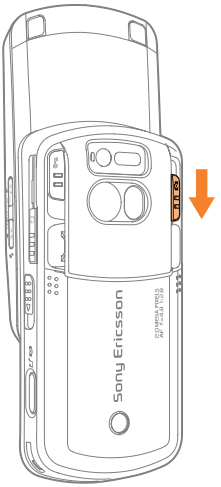

1 **Slide down the lens cover key in the idle display.**

The photo monitor screen appears.

2 **Press (option).**

3 **Press to select "Photo folder," and press (select).**

4 **Press to select "Photo fldr," and press (select).**

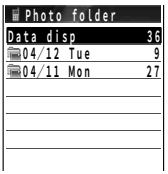

5 **Press to select the date folder containing the photo you want to view, and press (select).**

Three photos in the date folder in "Photo folder" appear starting with the photo taken most recently.

6 Press ⊕ to select the photo you want to view, and press ● (view).

Viewing movies you have recorded

Example: To play back data from the Movie folder

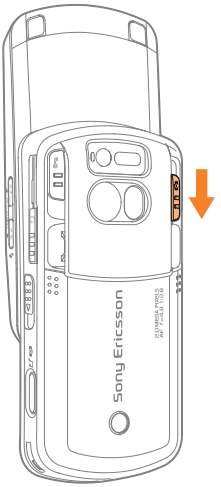

1 **Slide down the lens cover key in the idle display to display the photo monitor screen and press (movie).**

The movie monitor screen appears.

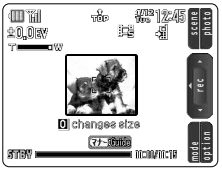

2 **Press (option).**

3 **Press to select "Movie folder," and press (select).**

4 **Press to select "Movie fldr," and press (select).**

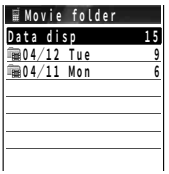

5 Press ⊕ to select the date folder containing the movie you want to view, and press ● (select).

Three movies in the date folder in "Movie folder" appear starting with the movie recorded most recently.

6 Press ⊕ to select the movie you want to view, and press ● (play).

Attaching a photo or movie to e-mail

1 Press [E] (E-mail) in the preview screen immediately after you have taken the image.

"Saved in data folder" is displayed, and the Create display appears.

The photo or movie you have taken is automatically attached to an e-mail (attachment).

"Other phone cannot play size over case happen" may appear. Press ▲▼ to select "Attach on," and press ● (select).

Photos and movies already saved in the data folder can also be attached to e-mail. The photo you have taken with "UXGA" or "SXGA" may not be sent in size as it is.

Photo mail

You can use "Photo mail" to automatically convert and send images so that they can be viewed properly on other cellphones even if the other party is not using an au cellphone.
To use Photo mail, you must change the other party's e-mail address to a Photo mail address.
If you select "Photo mail" for the automatic address change function when sending e-mail, the other party's e-mail address is automatically changed (as shown below) before sending.

Other party	E-mail address	New address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□.vodafone.ne.jp	△△△@□.vodafone.nepm.jp
TU-KA and au phones that do not support Movie mail	△△△@ezweb.ne .jp	△△△@ezweb.nepm.jp

□ varies according to the area.

About EZweb

You need to subscribe to the EZweb service to use the EZweb service. Contact an au shop or an au Customer Service Center if you did not subscribe to the service at the time of purchase.
To do initial settings before using. If you have not done initial settings yet, see page 22.
EZweb is an information service that allows you to enjoy the Internet on your cellphone.
With EZweb, you can obtain Chaku-Uta-Full™, the latest news, and other contents from information sites.

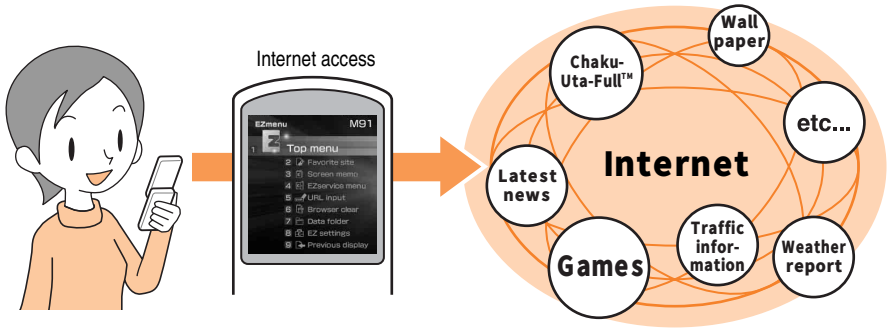

Displaying the EZ Top menu

1 Press [EZ] (EZ) in the idle display.

Press [EZ] (●) in the EZmenu; you can access "SonyEricsson@ez."

2 Press ◉ to select " Top menu," and press ● (ok).

The EZ トップメニュー display appears.

①	Searches for a site by category
②	Searches for a site with a keyword
③	Provides the latest information such as news, weather, share prices, and other information beneficial for business
④	Provides the latest information about the place where you are now, information about recommended spots you want to go to, and so on
⑤	Provides the latest information about games, fortune-telling, music, e-book, and information on hobby and entertainment trends
⑥	Provides information about shopping malls where you can purchase goods with your cellphone and the information about the auction where you can put up or go for easily
⑦	Provides information beneficial for daily life
⑧	Introduces au-recommended information and sites
⑨	Introduces useful and amusing recommended-services special to EZweb
⑩	Provides phone bills, procedures, au information, and au on-line manual
⑪	Registers/checks the safety information in disasters.
⑫	Provides phone bills in an English-version and introduces the site

It may take a short while for the display to appear.

The display layout and content are just an example. These are subject to change.

Viewing information sites

You can access (connect) to EZweb from EZ Top menu.
Useful and amusing information sites are provided.
Example: To access " 特集 " site in " ビジネス＆ニュース "

"EZ Top menu"

Press (ok) to select " ビジネス＆ニュース " and press (ok)

(Top display by genre)

Press twice to select shortcut link

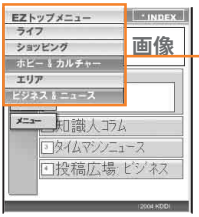

(Shortcut link)

Use (ok) to select your favorite genre

Press (クリア) or (back) to display EZ Top menu (※)

Press to select a menu by genre

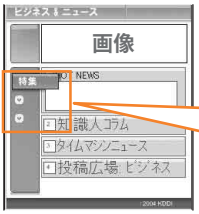

(Category selection display)

● **Menu by genre**

特集	Provides timely information
オススメ	Provides au recommended-sites
メニュー	Introduces scene-associated categories

Press to select " もどる " and press (ok)

Press to select " 特集 " and press (ok)

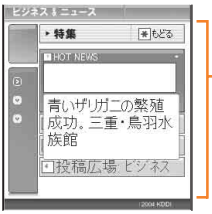

(Information site selection display)

Use (ok) to select your favorite genre and press (ok) → **Information site**

(クリア) or (back) → **To the top display of each genre**

Pressing returns to the idle display.

Some information sites are subject to additional information costs besides communications costs.

※ When you moved to other genre by a shortcut link, you will get back to the top of the genre you were previously viewing.

Saving your favorite sites

1 **Display the site you want to save, and press [E] (Browser Menu).**

2 **Press ⊕ to select "New bookmark," and press ● (ok).**

3 **Press [E] (cmplt).**

You can register up to 100 sites in the Favorite site. However, some sites may not be registered.

Viewing a site saved to the Favorite site

1 Press (EZ) in the idle display.

2 Press to select "Favorite site," and press (ok).

3 Press to select a folder, and press (select).

4 Press to select the site you want to view, and press (select).

Confirming your call costs

You can confirm call and transmission charges.

1 Press (start) in the idle display.

2 Press to select "Settings" and press (select).

3 Press to select "Time/Toll/Sub" and press (select).

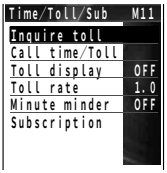

4 Press to select "Inquire toll" and press (select).

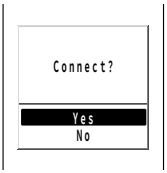

5 Press to select "Yes" and press (select).

Select the item you want to confirm.

Downloading a Chaku-Uta™

Example: To download a Chaku-Uta™ and specify it as an incoming ring

1 Press (EZ) in the idle display.

2 Press to select " Top menu," and press (ok).

3 Press to select " カテゴリで探す ," and press (Select).

4 Press to select " 着うた・着ムービー ," and press (Select).

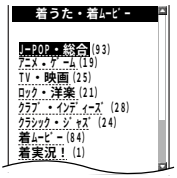

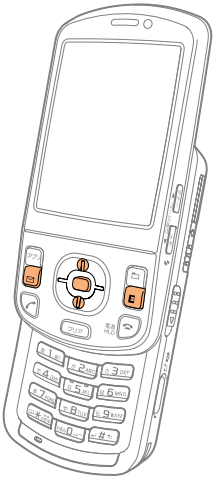

5 Press ◉ to select the desired site, and press ● (Select).

Follow the on-screen instructions to select the melody you want to download.

When the additional information cost is charged to use the site, you must input your EZ password or Premium EZ password.

EZ password: 4-digit number to be set when you subscribe to the paid contents for the first time.

Premium EZ password: 4~8 -digit number to be set when you apply to "初回まとめて au 支払い."

Follow the on-screen instructions to input either password.

Perform the setting when using the password for the first time.

6 Select a melody to download.

Download the Chaku-Uta™ by following the on-screen instructions.

7 When downloading finishes, press ✉ (play) to play back the Chaku-Uta™, and press E (save) while the Chaku-Uta™ is playing.

8 Press ◉ to select "Phone ring tone," and press ● (select).

The downloaded Chaku-Uta™ is specified as an incoming ring.

EZ "Chaku-Uta-Full™"

EZweb subscription required

EZ "Chaku-Uta Full™" is the music distribution service that allows you to download a whole music with a CD jacket and enjoy it with a high-quality sound. One Chaku-Uta Full™ is preinstalled in W31S.

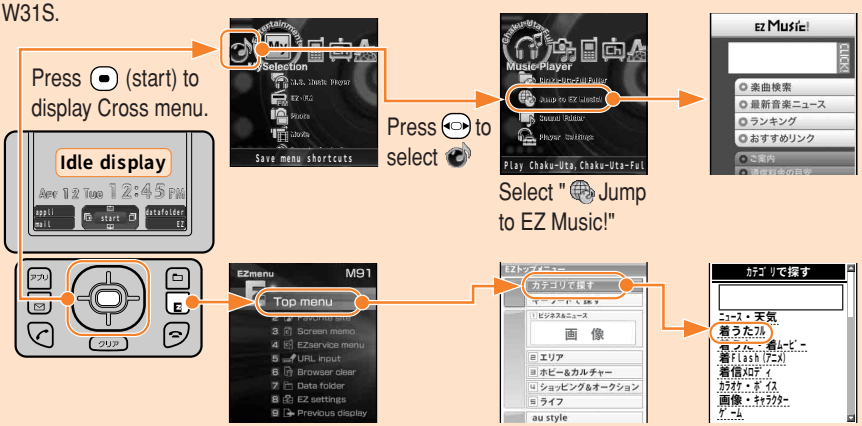

Downloading a Chaku-Uta-Full™

1 **Press (start) in the idle display.**

2 **Press to select (Jump to EZ Music!) and press (select).**

Download the Chaku-Uta-Full™ by following the on-screen instructions.

The Premium EZ password is necessary to register a paid program. Premium EZ password is the 4 ~ 8 -digit number to be set when you apply to " 初回まとめて au 支払い ."
Make sure to write down and preserve the Premium EZ password you have set.

The display layout and content are just an example. These are subject to change.

Playing back a Chaku-Uta-Full™

1 Press ● (start) in the idle display.

2 Press ◉ to select "Chaku-Uta-Full Folder" and press ● (select).

3 Press ◉ to select a Chaku-Uta-Full™ and press ● (play).

Operation during play-back

◉	Increases the volume.
◉	Decreases the volume.
◉ / ◉ (at least one second)	Rewinds or cues.
◉ (at least one second)	Fast-forwards.
● (❚❚/▶)	Suspends play-back or plays back
E (info) ※	Displays the image for displaying information
アプリ (Prev.)	Plays back previous data
◉ (next)	Plays back next data

※ May not be available depending on the data.

What you can do with EZchannel

With EZchannel, the latest contents can be distributed and automatically downloaded by just registering programs you want to watch on W31S.

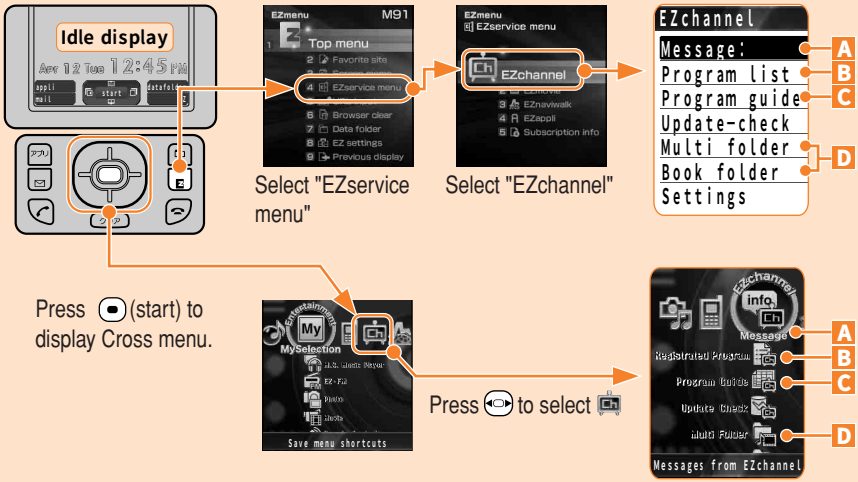

A To check news from au: "Message"

B To watch a downloaded program: "Program list"

Plays back a downloaded program.

※ You can enjoy the downloaded programs even in the place where the radio waves cannot be received.

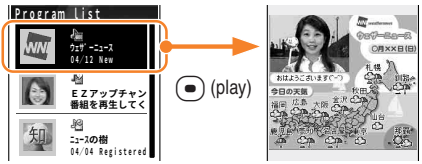

© weathernews
© KDDI/mediba

© weathernews

C To search for your favorite programs: "Program guide"

→ page 81

Search your favorite program viewing the introduction of the program or recommended information distributed from EZchannel.

D Move your favorite programs to "Multi folder" or "Book folder."

→ page 84

When a registered program is updated, the program is overwritten to old one. You should move the programs you do not want to delete to "Multi folder" ("Book folder" for e-books).

※ In some cases, you may not be able to move a program because of copyright protection.

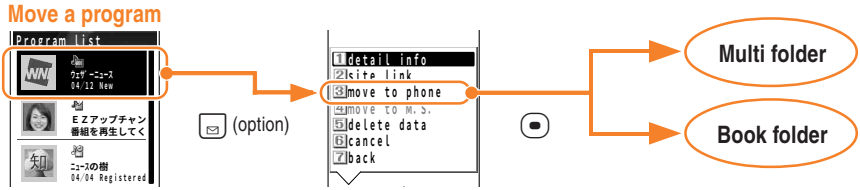

© weathernews
© KDDI/mediba

Enjoying EZchannel

① Register a program

Select a program from the Program guide. You can register up to three programs. The registered program is automatically downloaded during the period from late night to early morning and saved in the program list.

② Play back the program

You can watch a variety of multimedia content as though they were TV programs or magazines.

③ Save the program

You can save your favorite program data in the Multi folder, etc. Moving program data to such a folder prevents it from being overwritten when new data is delivered on a program update date.

1 Press [EZ] (EZ) in the idle display.

2 Press ◉ to select "EZservice menu," and press ● (ok).

3 Press ◉ to select "EZchannel," and press ● (ok).

Be sure to do initial settings before using the EZchannel.
If you have not done initial settings yet, see page 22.

EZchannel downloads a large amount of data in which one program reaches approximately 3M maximum bytes. To use EZchannel, it is recommended to participate in the flat-rate packet communication charge service "Double Flat."

※ For details, contact an au shop or au Customer Service Center.

The display layout and content are just an example. These are subject to change.

Registering a program

You can register up to three favorite programs from the Program guide.

1 **See steps 1 to 3 in "Enjoying EZchannel" (page 80) to display the EZchannel menu.**

2 **Press ● to select "Program guide," and press ● (select).**

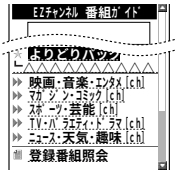

(sample display)

3 **Select and register a program.**

Follow the on-screen instructions to register the program.
The registered program is listed in the Program list display. If a registered program is updated, new data is automatically downloaded.

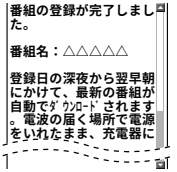

The program is downloaded when the delivery time comes.
Wait for the program to be downloaded in a place of good reception condition with your main unit turned on, set in the charger.

If the power is turned off in the Auto power off mode or EZweb restrict is set, the program may not automatically be updated, depending on your setting.

The Premium EZ password is necessary to register a paid program. Premium EZ password is the 4 ~ 8 -digit number to be set when you apply to " 初回まとめて au 支払い ." Make sure to write down and preserve the Premium EZ password you have set.

If you fail to automatically download a program, "Failed" appears in the idle display. If you press ● (select) in this display, you can manually download the program.

If you change the cellphone model from one with EZchannel to the W31S, access "Program guide" and select " 機種変更された方へ ." You can continue using the programs you registered in the previous cellphone.

Playing a program

When the program is updated

The message appears in the idle display, NEW appears.

1 Press ● (select).

© weathernews
© KDDI/mediba

Viewing the display

Registered	Registration of a program is completed, and the W31S is waiting for the first delivery.
Updated	A program is updated and has already played back.
New	A program is updated but has not yet played back.
Message	Message from program.

2 Press ↕ to select a program you want to see, and press ● (play).

Operation during play-back

	Moves the cursor up/down and scrolls the screen.
/ **(at least one second)**	Rewinds or cues.
	Fast-forwards.
(volume ↓)	Decreases the volume.
(volume ↑)	Increases the volume.
クリア	Suspends play-back.
(select/ok)	Selects a link.
Number keys	Selects a link number.
	Ends play-back and returns to the idle display.

※ May not be available depending on the program.

Some downloaded programs have a restricted play-back period, timeframe and count. These programs cannot be played back when such restrictions are met (The count starts just after the play-back).

Saving a program

The programs registered by EZchannel are overwritten each time it is updated. You should save the programs you do not want to delete in "Multi folder" or "Book folder" in the data folder; then you can watch them any time.

Example: To save programs in "Multi folder" of the data folder

1 **See steps 1 to 3 in "Enjoying EZchannel" (page 80) to display the EZchannel menu.**

2 **Press ● to select "Program list," and press ● (select).**

© weathernews
© KDDI/mediba

3 **Press ● to select a program you want to save, and press ✉ (option).**

4 **Press ● to select "move to phone," and press ● (select).**

When moving an e-book, "Book folder" appears instead of "Multi folder."

5 Press ⊜ to select "Multi folder," and press ⊖ (select).

Programs are saved in "Multi folder" of the data folder.

In some cases, you may not be able to save a program because of copyright protection.

Programs cannot be saved if a restricted play-back period, timeframe or count is met.

EZweb subscription required

What you can do with EZnaviwalk

Cellphone with car navigation system attached!

EZnaviwalk is a full-scale navigation system for guiding pedestrians to a destination. Let's try it now.

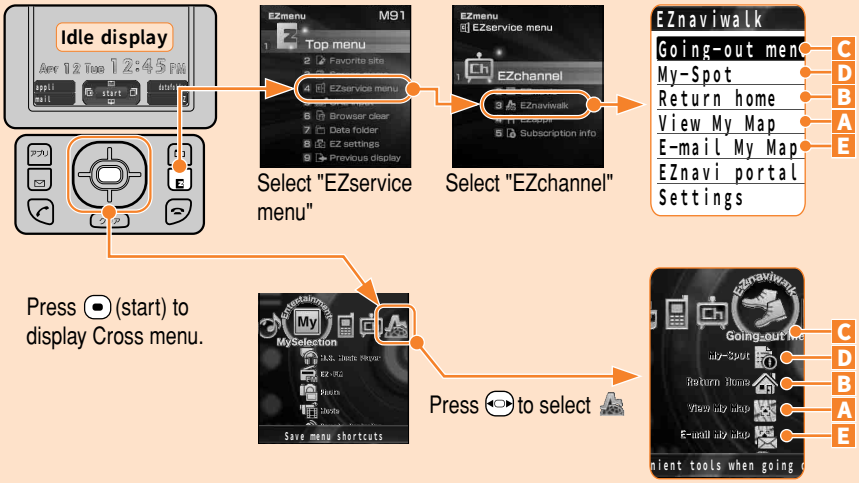

A When you wonder where you are: "View My Map"

If you select only "View My Map," a map of your current position appears in real time.

Map

B When you return to home: "Return home" → page 90

If you register your home location in advance, you can easily navigate a route to your home from wherever you are.

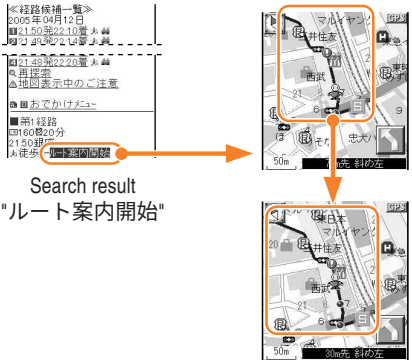

Search result
"ルート案内開始"

C When you go out: "Going-out menu"

You can display various menus convenient for going out.

NEW	Provides new information and news
乗換検索	Searches the train transfer guide and train schedule
ナビ	Voice navigation service to a destination or Registers "My-Spot" "着せ替えナビ" = Changes the voice or icon to your favorite celebrity or cartoon characters
道路情報	Searches nationwide road information in real time
設定ヘルプ	Performs various settings and confirm FAQs
登録解除	Registers/Cancels memberships

D Register your favorite places in "My-Spot"

→ page 88

If you register frequently visited places or home, this system lets you navigate to your destination.

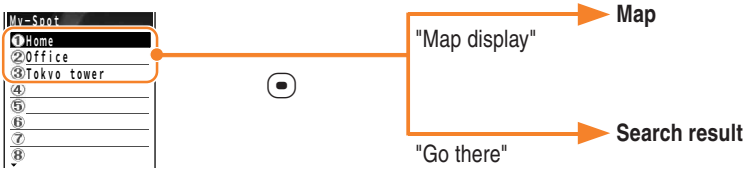

E To inform your partner where you are: "E-mail My Map"

You can inform your partner where you are by mail when you plan to meet him or her.

Send

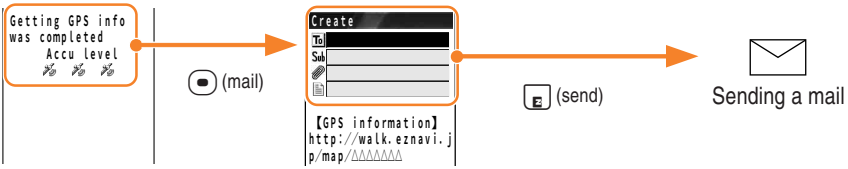

Receive

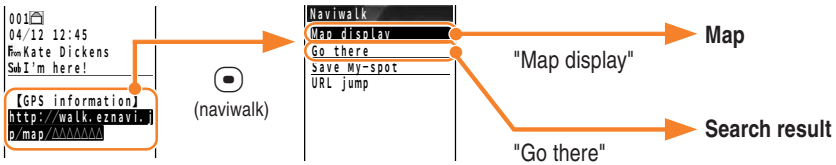

Registering your home in "My-Spot"

If you register frequently visited places in My-Spot, you can easily display a route and map to the destination.

Example: To register your home (When you are at home)

1 Press (EZ) in the idle display.

2 Press to select "EZservice menu," and press (ok).

3 Press to select "EZnaviwalk," and press (ok).

4 Press to select "My-Spot," and press (select).

5 Press to select "Home" and press (save).

6 Press ◉ to select "Current pos," and press ● (select).

7 Press ● (save).

The current position is registered as your home.

Press ● (select), then use ◉ and ● to select "Map display" → "Yes"; the map will appear.

Checking how to go home

You can search a route from your current position to the destination, combining train and walking routes. To search a route to your home, register your home in advance. See page 88 for details on how to register your home.

1 **See steps 1 to 3 in "Registering your home in "My-Spot"" (page 88) to display the EZnaviwalk menu.**

2 **Press ● to select "Return home," and press ● (select).**

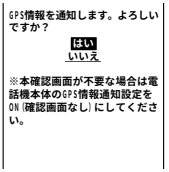

3 **Press ● to select " はい ," and press ●.**

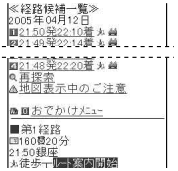

4 **Press ● to select " ルート案内開始 ," and press ●.**

S indicates a departure place; G indicates a destination (your home).

Operation during navigation

1 / 2	Zooms in/out on the map
●	Scrolls the map up, down, left, and right
* / #	Turns the map left/right

Navigation engine by NAVITIME JAPAN/ 地図 © 昭文社

EZweb subscription required

The W31S allows you to listen to the FM radio.
You can check song names or search for your favorite songs of Chaku-Uta™ and download them while receiving the EZ · FM.

How to listen to the EZ · FM

There are two ways to listen to the EZ · FM:

1 By connecting a stereo earphone to the W31S.

2 By connecting the common AC adaptor 01 (option) to the desktop holder and inserting the W31S into the desktop holder.

If you want to listen from the speaker, set " スピーカー切り替え " (Switching speaker) to " スピーカー " (Speaker). For details on the setting, see page 94.

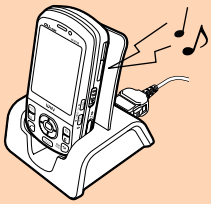

The EZ · FM sounds from an earphone by default.

To listen to the EZ · FM clearly

The stereo earphone microphone code and common AC adaptor 01 code work as an antenna. Extend the code as long as possible and search for a direction that enables the EZ · FM to sound better.
We also recommend that you listen to the EZ · FM near a window if you are in the room where radio waves are hard to reach.

To connect a stereo earphone microphone

① Connect stereo earphone to the remote controller with microphone.

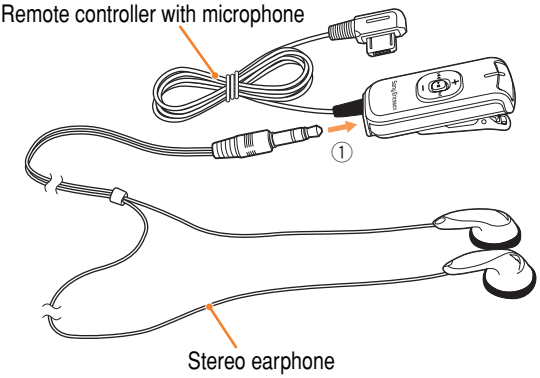

② Slide open the earphone terminal to the direction of the arrow.
③ Insert the stereo earphone terminal into the earphone terminal.

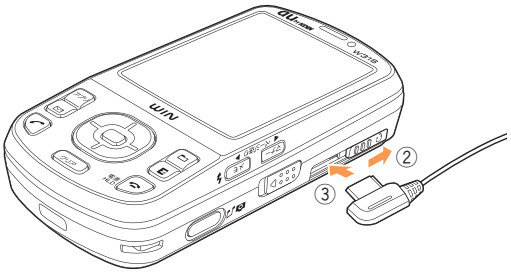

Connecting it by force may cause a breakage. Connect it properly in the direction shown in the above illustration.

Listening to the EZ · FM

1 Press ● (start) in the idle display.

You can also receive the EZ · FM by pressing アプリ in the idle display, pressing ↕ to select "EZ · FM," and pressing ● (起動).

2 Press ↕ to select (EZ · FM) and press ● (select).

The EZ · FM is received and appears.

How to view the EZ · FM display

Radio frequency

NOW ON AIR information

If you use the EZ · FM for the first time after the purchase, the display to select an area appears. Select an area where you use the EZ · FM. Receivable radio stations are automatically set up.

You can change the selected item by pressing クリア in the EZ · FM display and pressing ↕. Pressing ● allows you to operate the selected item.

If there is an incoming call while the stereo earphone is connected to the W31S, pressing ☎ starts a call with the W31S and pressing the switch of the stereo earphone starts a call with the stereo earphone.

The specification is subject to change without notice. The display is an example.

To adjust volume

Press ◀▶ in the EZ · FM display.
The volume can be set to 10 levels and silent.

◀	Decreases volume
◀ **(at least one second)**	Mutes the sound
▶	Increases volume

To select a radio station

Press ▲▼ in the EZ · FM display.

The following is a way to tune the radio frequency per 0.1 MHz:
① Press クリア in the EZ · FM display.
② Press ▲▼ to select Radio frequency and press ●.
③ Press ▲▼ (TUNING).
You can tune automatically by holding down ▲▼ for at least one second.

To display NOW ON AIR information

If you select NOW ON AIR information in the EZ · FM display, and press ●, the information such as artist and song names on the radio is displayed.

Information may not be provided depending on the programs.

Using EZ · FM does not charge the packet transmission fee.
Packet transmission fee is charged if services such as NOW ON AIR are used.

To switch the sound output (Earphone/Speaker)

If you press ✉ (TOOL) in the EZ · FM display, and select " 7 スピーカー切り替え " (Switching speaker), you can set the sound output to " イヤホン " (Earphone) or " スピーカー " (Speaker). The default setting is " イヤホン " (Earphone).

Suspending and ending the EZ · FM

You can suspend or end the EZ · FM. If you suspend the EZ · FM, you cannot operate it, but you can perform other operations while listening to the EZ · FM.

1 Press (end) in the EZ · FM display.

Suspend	Closes the EZ · FM display and continues the EZ · FM
Exit	Stops the EZ · FM and exits the EZ · FM display
Cancel	Continues the EZ · FM

2 Press (navigation) to select "Suspend" or "Exit" and press (select).

If you press (end) in the idle display while the EZ · FM is suspended, the EZ · FM quit confirmation display appears. You can end the EZ · FM by pressing (navigation) to select "Quit " and pressing (select).

If you press (アプリ) in the idle display while the EZ · FM is suspended, the EZ · FM display reappears.

Changing the input mode

Input text by changing the input modes below.

Input mode	Press [E] (mode)	Press [□] ([☺]/smb)
	漢 : Kanji/Hiragana	☺ : E MOJI
	カ／ｶﾅ : Kana (double/single byte)	記 : Symbols (double byte)
	A／aA : English (double/single byte)	ｷｺﾞｳ : Symbols (single byte)
	1／12 : Number (double/single byte)	

For details on how to enter E MOJI/Symbols, see page 99.

1 Press [E] (mode) in the text input display.

Each time you press [E] (mode), the input mode changes to Kanji/Hiragana → Kana → English → Number → Kanji/Hiragana...

If you press [アプリ] (A/A) in the Kana, English, or Number mode, the double/single byte mode changes.

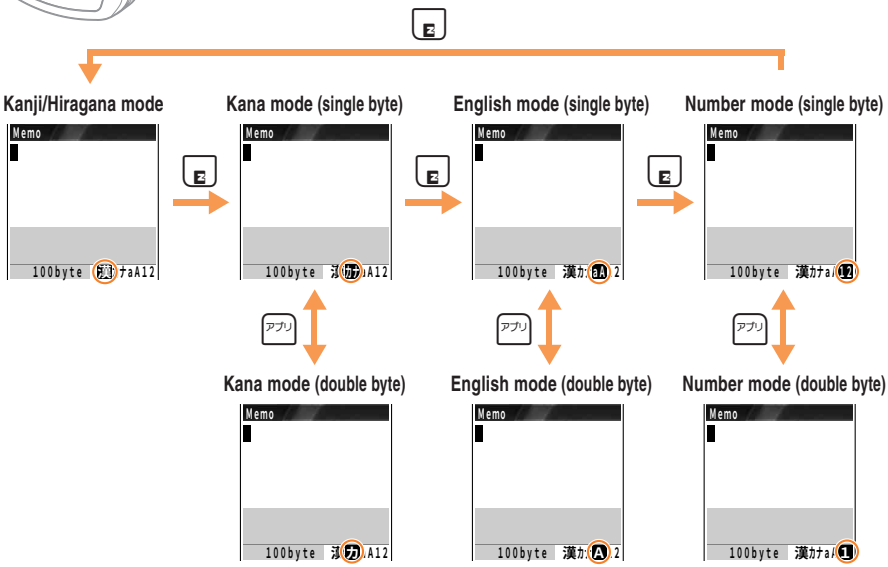

The input mode that you can select is different depending on the current input display.

Inputting text

To input alphanumerics

Change the input mode to the English mode (page 96).
In the text input display, you can input text by pressing the keys indicated in the following table.

Example : 2ABC → 2ABC → 2ABC → 2ABC → 2ABC → 2ABC → 2ABC

a → b → c → A → B → C → 2

■ Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key												
	1	2	3	4	5	6	7	8	9	10	11	12	13
あ 1 .@/:	.	@	/	:	-	_	~	1					
か 2ABC	a	b	c	A	B	C	2						
さ 3DEF	d	e	f	D	E	F	3						
た 4GHI	g	h	i	G	H	I	4						
な 5JKL	j	k	l	J	K	L	5						
は 6MNO	m	n	o	M	N	O	6						
ま 7PQRS	p	q	r	s	P	Q	R	S	7				
や 8TUV	t	u	v	T	U	V	8						
ら 9WXYZ	w	x	y	z	W	X	Y	Z	9				
わ 0	Space	!	?	-	,	'	;	(	)	”	&	\	0
※	!	?	-	,	'	;	(	)	”	&	\		

※ ＊ is also used to switch between uppercase and lowercase.

You can input your e-mail address using up to 20 single byte alphanumerics in lowercase including "-" (hyphen) and "." (period). Note, however, that "." cannot be used in a row, or at the beginning or end of your e-mail address. Also, your e-mail address cannot be prefixed by "0."
Characters and symbols shaded in the table are not allowed before @ of " △△△ @ezweb.ne.jp."

Inputting text (continued)

Example: To input "tomy1" in the mail address

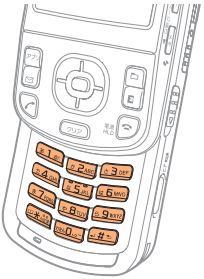

1 Input the section preceding @.

t : Press 8TUV once.

o : Press 6MNO three times and press ▷ once.

m : Press 6MNO once.

y : Press 9WXYZ three times.

1 : Press 1@/: eight times.

For details on how to input "@ezweb.ne.jp," see page 100.

To consecutively input characters assigned to the same key

Input the first character, then press ▷ and press the next character key.

Example: To input "ab"

Press 2ABC once.

Press ▷.

Press 2ABC twice.

To input uppercase characters

Example: 2ABC → ＊ → ＊

a → A → a

To delete characters

Example: Press クリア once.

abcd**e** → abc**d**

Hold down クリア at least one seconds.

abcd**e** → ▮

(All characters are deleted.)

To input icons and symbols

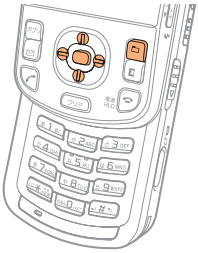

1 Press (/smb) in the text input display.

Each time you press (/smb), the input mode changes to E MOJI → Symbols (double byte) → Symbols (single byte) → E MOJI...

E MOJI mode

Symbols mode (double byte)

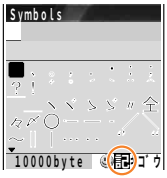

Symbols mode (single byte)

2 Press to select the icon you want to use, and press (select).

The input mode that you can select is different depending on the current input display.

To input sentences

You can call and enter useful sentences and face marks (KAO MOJI) you use frequently.

Example: To input "@ezweb. ne. jp" in the mail address

1 Press (option) in the text input display.

2 Press to select "input," and press (select).

3 Press to select "useful sentence," and press (select).

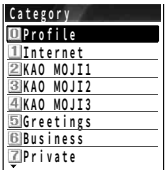

4 Press to select "Internet," and press (select).

5 Press to select "@ezweb.ne.jp," and press (select).

Troubleshooting

Symptom	Items to check	Solution	Page
Power does not turn on.	Is the battery pack properly attached?	Properly attach the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.	10
	Did you hold down ⏻ for at least one second?	Hold down ⏻ for at least one second.	13
Cannot make calls.	Is "圏外" displayed on the display?	Make a call from a place where "圏外" is not displayed.	13
	Did you input the area code before inputting the phone number?	When making a call to a phone other than a cellphone, first input the area code even if you are inside the same city.	26
	Is the power on?	Hold down ⏻ for at least one second.	13
	Did you press ☎?	Press ☎.	26
Cannot receive calls.	Is "圏外" displayed on the display?	Move to a place where "圏外" is not displayed.	13
	Is the power on?	Hold down ⏻ for at least one second.	13
No reaction when a key is pressed.	Is the power on?	Hold down ⏻ for at least one second.	13
	Are the keys locked?	Slide down the lock key to release the keylock.	3
Warning tone sounds, and power turns off.	There is not enough power left in the battery pack.	Charge the battery pack.	10
Incoming calls are automatically answered.	Is record message set?	Hold down メモ for at least one second to cancel record message.	33
You cannot hear the other party.	Is the volume during a call set low?	Press ▲ while you are talking. The volume during a call increases.	29

Other features

Music player

You can play your favorite music in succession by registering them in the playlist.

Playing BGM

You can create, send or receive mails while listening to music or EZ · FM. Viewing EZweb is also possible.

Menu design settings

You can select a pattern for the menu display. You can also set the pattern data you downloaded.

Infrared data exchange feature

You can exchange such data as a phone book, profile, or the data in the data folder among au cellphones that support infrared data exchange feature.

EZ apps (BREW®)

You can download game software from EZweb sites and play games.

"Memory Stick Duo" (commercial item) service

You can save photos and movies you took with the camera, back up personal data such as a phone book, and save e-mails you received.

Remote controller

You can use the W31S as the remote control for a TV set, etc.

BAR CODE READER

You can read barcodes (JAN codes and QR codes) using the camera.

EZ movie

You can download and play back movies of various genres from EZweb sites.

Index

A

accessories **10**

B

battery pack **10, 17**
battery power, remaining **4, 13**
before use **10**

C

call **26**
if you could not answer 27
making 26
notify/not notify the other party 26
receiving 27
camera **56**
movie 60
photo 58
successfull talking **57**
cellphone etiquette **1**
charge indicator **11, 14**
charging the battery pack **10**
C-mail **51**
C-mail safe block function 51
creating and sending 52
icon 55
opening 54, 55
receiving 54
confirming your call costs **73**
confirming your cellphone number **23**
cross controller **19**
Cross menu **20**

D

desktop holder **10**
Dialed display **28**
Disaster Bulletin Board (demonstration) **6**
domain **24**
downloading Chaku-Uta™ **74**
downloading Chaku-Uta-Full™ **76**

E

e-mail **41**
attaching photo or movie 66
creating and sending 42
icons 42, 45, 47, 49
initial settings 22
opening 45, 47
receiving 45
replying 48
viewing attached photo or movie 49
e-mail address
changing 24
confirming 23
EZ "Chaku-Uta-Full™" **76**
downloading 76
playing back 77
EZchannel **78**
enjoying 80
playing a program 82
registering a program 81
saving a program 84
EZ · FM **91**
adjusting volume 94
connecting a stereo earphone 92
listening 93
NOW ON AIR information 94
selecting radio station 94
suspending and ending 95
switching earphone/speaker 94
to listen clearly 91
EZnaviwalk **86**
My-Spot 88
Return Home 90
EZ Top menu **69**
EZweb **68**
confirming your call costs 73
Favorite site 71, 72
information sites 70
initial settings 22

F

Favorite site
saving 71
viewing 72

I

icons **15**
ID Unsent **27**
idle display **13, 15**
incoming indicator **14**
incoming ring
tone 30
volume 30
initial settings **22**
Internet (See "EZweb")

K

Keylock **3**

M

mail
C-mail 51
e-mail 41
mail filter **50**
manner mode **3, 32**
"Memory Stick Duo" **12**
icon 15
movie
attaching to e-mail 66
recording 60
saving 61
viewing 64

N

names of parts **14**
Back side 17
Front part 14
Side part 16

O

one-ring call **7, 29**
icon 29
opening/closing **13**

P

phone book **35**
editing 38
making a call from 37
saving 35
saving dialed/received call 40
photo
attaching to e-mail 66
saving 59
taking 58
viewing 62
Photo mail **67**
power **4, 13**

R

Received display **28**
icons 28
reception **4, 13**
record message **3, 33**
playing back 34
redialing **28**

S

sites **70**
soft key **18**
spam **7, 50**

T

text input **96**
alphanumerics 97
changing input mode 96
character key assignment table 97
characters assigned to the same key 98
deleting characters 98
icons 99
sentences 100
symbols 99
uppercase 98
troubleshooting **101**

V

volume during a call **29**

Y

your e-mail address
changing 24
confirming 23

For inquiries, call:

au Customer Service Center (General Information)

From regular phones:

フリーコール **0077-7-111**

(toll free)

From au cellphones:

157 area code not required

(toll free)

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.

古紙配合率100%再生紙を使用しています

Sales : KDDI Corporation
Okinawa Cellular Telephone Company
Manufacturer : Sony Ericsson Mobile Communications Japan, Inc.

モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

A-C80-100-**11** (1)
March 2005, 1st Edition